


HOW TO INSTALL VACREL® VACUUM RELIEF VALVE

STEP 1

Determine best installation location for the VacRel®.

This should be at the highest point of the system on either the top of the supply pipe (best location), or on top of the return/balance pipe (alternative location).

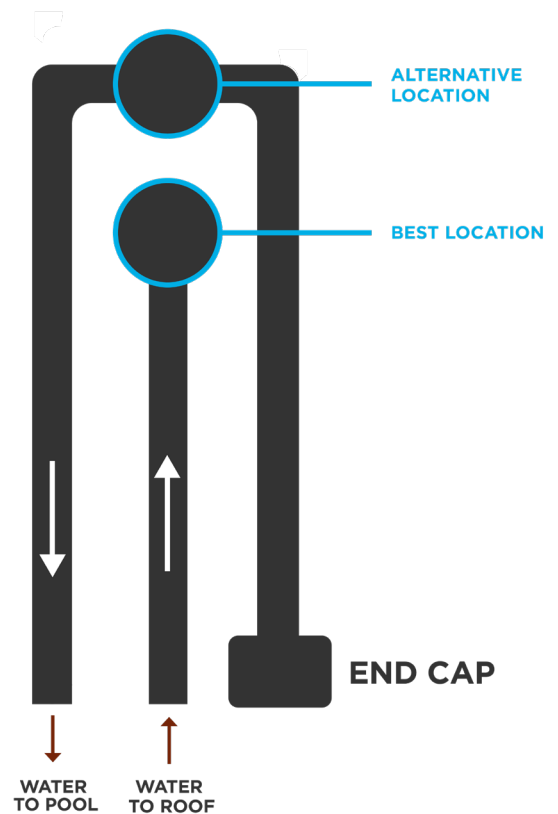

STEP 2

Using type N cement and primer, install the VacRel® in a 40mm elbow (45° or 90°) on the supply pipe, or a PVC tee if installing on the return/balance pipe using standard gluing procedures.



Looking for more products or information? Visit: www.bosssolar.com.au